

GBM

INSTALLATION & OPERATING INSTRUCTIONS



TABLE OF CONTENTS

| | |
|--|----|
| SPECIFICATIONS | 1 |
| MOUNTING | 3 |
| WIRING | 4 |
| THEORY OF OPERATION | 6 |
| MILIVOLT INPUT OPTION JUMPER SELECTIONS..... | 7 |
| FRONT PANEL OPERATIONS..... | 8 |
| PROGRAMMING FLOW CHART | 8 |
| DEFINITIONS OF MENU PROMPTS..... | 9 |
| CALCULATING SCALE FACTORS | 11 |
| PROGRAMMING..... | 12 |
| TROUBLESHOOTING GUIDE | 17 |
| WARRANTY | |
| DECODING PART NUMBER | |

SPECIFICATIONS

Features

- 5 Digit Scaling Factor
- Display Rate, Batch Size and (Batch Total or Grand Total)
- Second B Relay Programmable for Output at Prewarn or selected Batch/Grand Total
- Remote Start and Stop/Reset Inputs
- Pulse Input - 10 kHz Max.
- Security Lockout
- NEMA 4X / IP65 Front Panel
- 30mV Magnetic Pickup Input Option

Application:

The GBM miniature batcher is ideal for all batching applications. The display will show Batch Amount, Rate and Batch/Grand Total at the push of a button. The Start and Stop/Reset buttons make batching simple.

Description:

The GBM is a 6 digit totalizer and 4.5 digit ratemeter with two relay outputs. One output is dedicated to the batch amount (Preset A), the other can be activated for Prewarn or Batch/Grand Total. The unit can count up to the preset (reset to 0) or down from the preset (set to preset). Start, Stop and Reset functions can be activated from the front panel or remote inputs.

Specifications:

Display: 6 digit, 0.55" High LED

Input Power:

110 VAC $\pm 15\%$ or 12 to 15 VDC

220 VAC $\pm 15\%$ or 12 to 15 VDC

Current: 250 mA DC max. or 6.5 VA AC

Output Power: (AC powered units only)

+12 VDC @ 50 mA, unregulated -10 + 50%

Temperature:

Operating:

+32°F (0°C) to +130°F (+54°C)

Storage:

-40°F (-40°C) to +200°F (93°C)

Humidity: 0-90% Noncondensing

Memory: EEPROM stores data for 10 years if power is lost.

Inputs:

High Impedance DC pulse input 4-30 VDC (high), Open or 0-1 VDC (low), 10 K ohm impedance, 10 kHz max. speed.

-M Option:

Mag. Input, Input A accepts 30mV input (50 V max. P/P) signals 10 K ohm impedance, 5 kHz max.

Stop / Reset:

Front Panel:

STOP/RST button stops batch if batch is running, Resets displayed value and relay outputs if batch is stopped.

Remote:

4-30 VDC, positive edge: stops batch if batch is running, Resets batch amount if batch is stopped.

NOTE: Hold either front or remote reset active to inhibit any start inputs.

Start:

Front Panel:

START button Starts batch by energizing Relay A (and Relay B if Prewarn selected).

Remote:

4-30 VDC, positive edge: Starts batch by energizing Relay A (and Relay B if Prewarn selected).

Scaling Factor (K-Factor): A user programmable K-Factor is used to convert the input pulses to engineering units. The 5 digit K-Factor divider, with decimal keyed into any position, allows easy direct entry of any K-Factor from 0.0001 to 99999.

Presets: Two control outputs are provided. A 5 digit value can be entered for both presets. The decimal point location is the same as the counter (No decimal in Batch Total counter).

PRESET A:

The preset A output is dedicated to the batch amount. When START is activated, Relay A will energize and remain on until the batch is complete or the batch is stopped.

PRESET B:

The preset B output can be programmed to activate as a Prewarn (for two stage batch control) or activate on Batch Total or Grand Total (selectable).

When set for PREWARN, Relay B will energize when START is activated and drop out at Prewarn number before preset.

When set for Batch Total or Grand Total, Relay B will activate when the batch total or grand total counts up to preset B amount. The output ON time can be set for a duration (0.01 to 99.99 sec.) or latched (0.00 setting). If a value other than 0.00 is set for the duration, the batch total or grand total will auto-reset at preset B.

Control Outputs:

Relays:

2 each N.O. Relays; 5 Amps 120/240 VAC or 28 VDC.


Lockout: Unauthorized front panel changes can be prevented by entering a user selected 5 digit code. The front panel can be completely locked out (except Start & Stop/Reset) or the preset can remain accessible.

Ratemeter: Accurate to 4 1/2 digits (± 1 display digit). The rate display updates once per second. The rate meter can be programmed to sample from 2 to 24 seconds maximum, and auto-range up to 5 digits of significant information. The ratemeter displays in units per second, minute or hour.


Batch or Grand Totalizer: In addition to viewing the batch amount, a second counter can be viewed. This counter is programmable to count either the number of batches (Batch Total) or the grand total count (Grand Total).

SPECIFICATIONS (continued)

Dimensions:

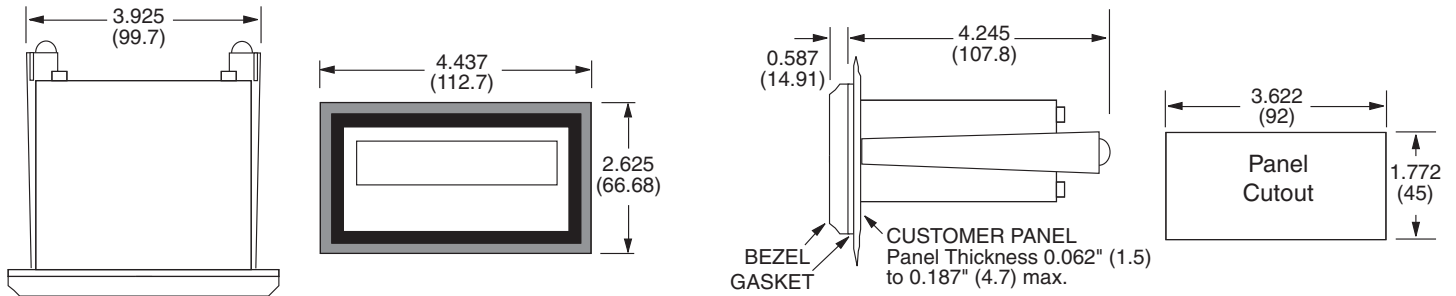

Application

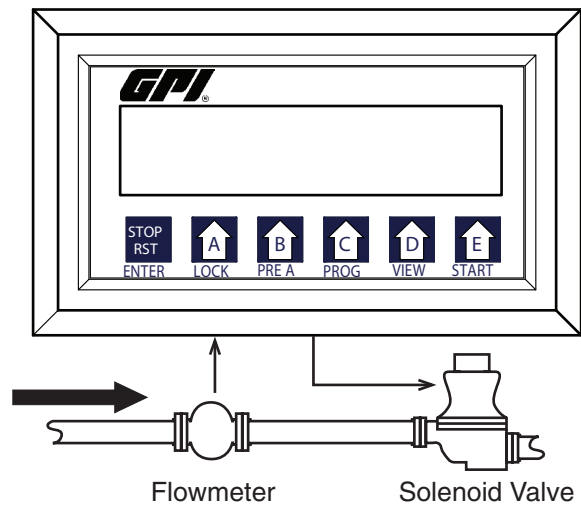

MOUNTING

The unit is designed to be mounted with a gasket providing a water tight seal. Two mounting brackets are provided to secure the unit to the panel. A panel less than .1" may distort if the clamps are screwed too tightly.

Slide the body of the unit through the rubber gasket. Insert the unit into the panel. As shown in "FIG. A", slide the brackets up the groove to press against the back of the panel. Insert screws into rear of brackets and tighten them evenly and alternately. Do not over tighten! A normal level of torque is required. Maximum torque should be 3" pounds.


This product is designed to be panel mounted and is NEMA 4 rated if proper mounting procedures are followed and the required and supplied hardware is correctly used.

If the panel in which the unit is mounted is less than .125 of an inch thick, the possibility exists that there will be some flexing. Should this flexing occur, the resulting deformation of the panel could cause a loss of the water tight seal. In case this should occur, the use of silicone or other sealant would be recommended.


This product is designed to the NEMA 4 standard. However, the fact that we are unable to control either the location in which the device is installed or the actual installation itself requires that the company's liability shall extend only to the repair or replacement of a defective product.

We are prepared to offer additional assistance in those special situations where normal mounting methods do not seem to satisfy the customers needs. This assistance may be obtained by calling the factory and asking for Industrial Customer Service.

FIG. A

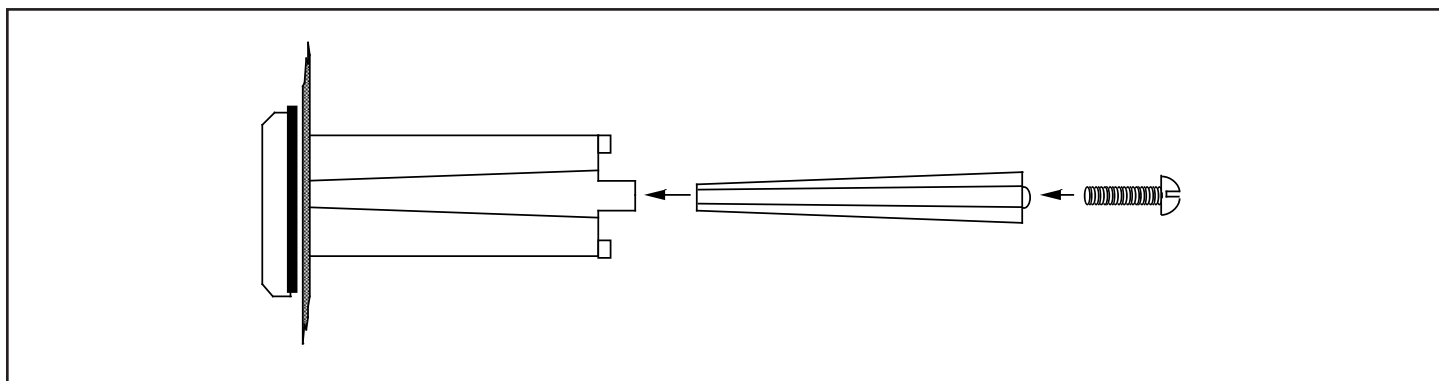

DIMENSIONS

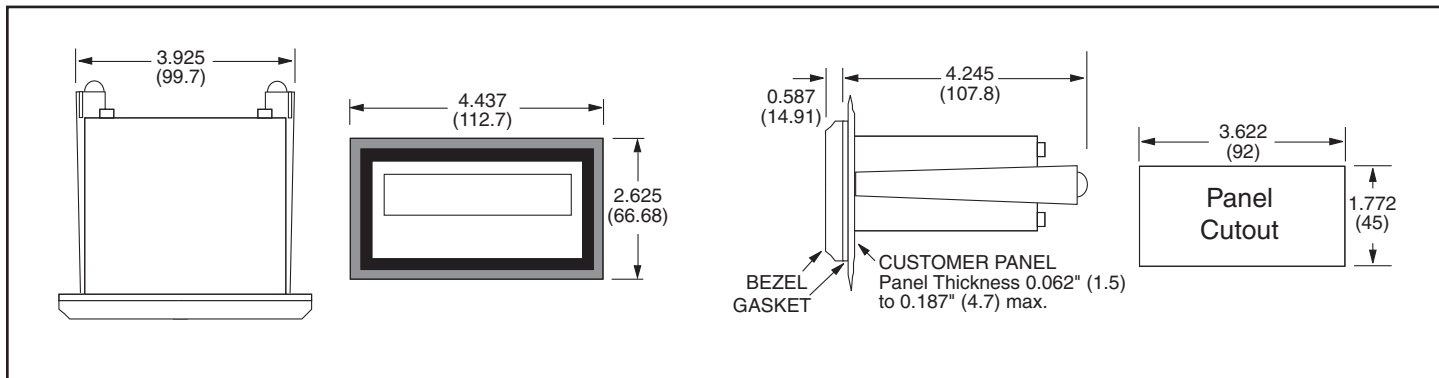

WIRING



The rear terminal contains 12 screw terminals for connecting #14 to #28 gauge wire.

The unit is controlled by a microprocessor and, therefore, an electrically "noisy" environment could cause operating problems. The input power line should not be common to power lines for motors, pumps, contactors, etc.

The unit is designed to be immune from line or RF voltage interference. In some environments voltage spikes of over 100 volts, even 1000 volts, can occur. When common to a power line driving motors voltage fluctuations can be extreme and rapid. Lines driving DC or AC solenoids, relays, or actuators can also cause problems.

Four sources of noise can occur:

- 1) AC power line noise - If the unit cannot be connected to a clean power source, an inductive load suppressing device (MOV as GE # V130LA1 or Resistor Capacitor as Paktron # .2 uf/220 ohm @ 400V) can be installed. Although locating the suppressor across the AC supply at the unit should help, best results are obtained by connecting the suppressor across the leads of the "load" at the device causing the spike.
- 2) Input line noise -The noise is carried on the input and D.C. ground lines. Make sure the input wires are never run into the unit in a bundle with power input lines. Also, keep these input lines isolated from inductive lines from devices drawing heavy loads. If there is a possibility of electrical noise, we recommend using shielded cable, with the shield being hooked to the D.C. ground terminal on the instrument, and to "earth" at one point in the circuit, preferably at the D.C. ground terminal of the unit.
- 3) Output lines - The unit has two relay outputs. When these outputs are used to run external relays or solenoids, spikes can be generated upon activation. This noise can spread through the instrument causing operating problems. If the source is a D.C. operated device, a general purpose diode (IN4004) placed across the solenoid prevents electrical noise spikes. Connect the cathode (banded side) to the more positive side of the coil. If the source is an A.C. operated device, use a MOV or Resistor Capacitor across the coil.
- 4) 12 VDC output supply - Noise can be generated on the 12 VDC output supply if it is used to drive inductive loads or if the current draw exceeds 50 mA. Insure that all inductive loads have a diode (such as IN4004) across the coil and that the current does not exceed 50 mA.

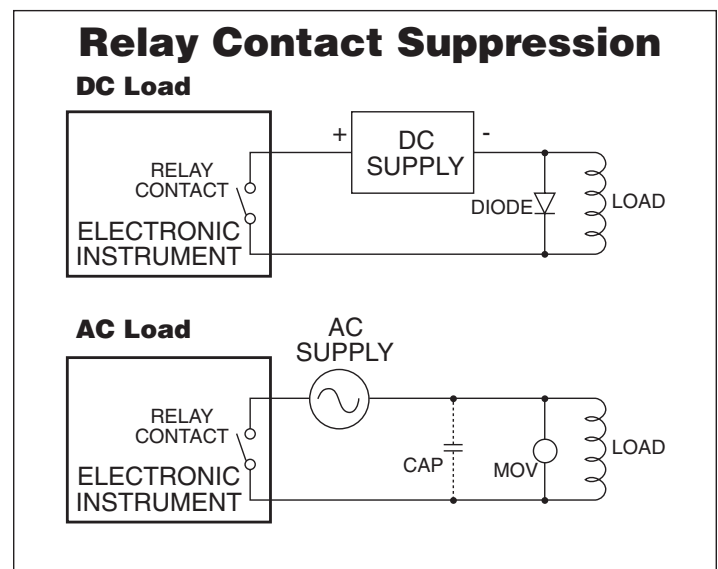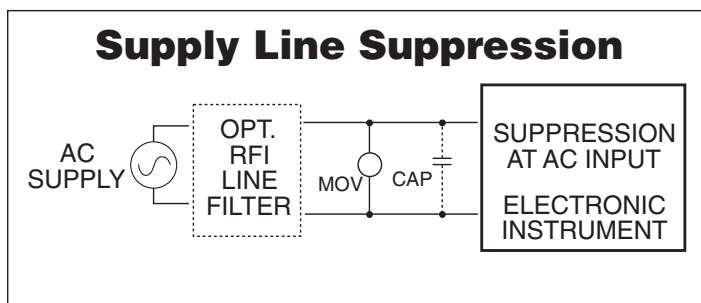

WIRING (continued)

AC / DC Power Connections

NOTE: Connect power only after other connections are finished. Do not touch the live AC power terminals! The unit has been designed with an isolated AC input. Thus, polarity is not a concern for the AC input. Connect AC power to pins 11 and 12. The chassis is plastic, therefore earth ground is not used. For D.C. operation, connect + 12V to pin 7 and - D.C. to pin 8.

Sensor Connections

These diagrams show how to hook typical input sensors to the unit. The unit supplies an unregulated 12 Volt (50mA) output to power these sensors (Pin 7).

A valid pulse is one which makes a transition from the off-state (0 to 1V) to the on-state (4 to 30V): a positive going edge. The input impedance is 10K Ohms to ground. The unit can be programmed from the front panel for slow switch closure inputs up to 40Hz (select "Lo CPS"), or solid state switches (select "hi CPS") up to 9.99KHz. No rear terminal jumpers are required. Use PNP (sourcing) type pulsers.

Wiring Terminations:

- 1- COMMON
- 2- N.O.(N.C./NPN)
- 3- COMMON
- 4- N.O.(N.C./NPN)
- 5- COUNT
- 6- START
- 7- 12VDC OUT/+DC IN
- 8- -DC (GROUND)
- 9- STOP/RESET
- 10- NOT USED
- 11- A.C. INPUT
- 12- A.C. INPUT


RELAYS
A
B

REAR VIEW




Typical Flowmeter Connections

High Impedance (4-30VDC) Pulse Input with Analog Output

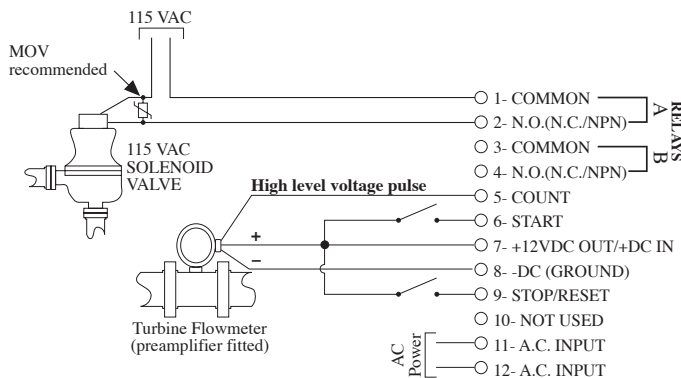

Magnetic Pickup (30 mV) Pulse Input

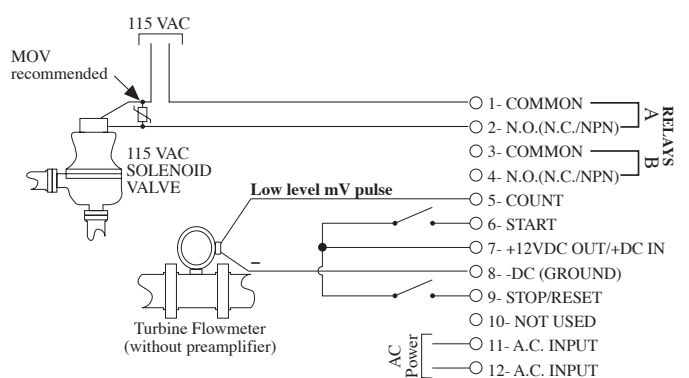

THEORY OF OPERATION

Batching

After the batcher has been programmed, it will operate as follows:

The unit will reset to "0" (count up mode) or load Preset A (count down mode) when RESET/STOP is activated. (front button or rear input)

When Start (front button or rear input) is activated, Relay A (and Relay B if Prewarn is selected) will energize and the right decimal will light. The unit will count in engineering units corresponding to the input scaling.

If Prewarn is selected for Relay B, Relay B will drop out when the count is at the selected number (Preset B) before final Preset A. When Preset A (or "0") is reached, Relay A drops out and the right decimal turns off. (The right decimal turns on whenever Relay A is energized). At the end of the batch the display is immediately loaded with "P" and Preset A number. At this point you can:

- Press START to reset and start another batch
- Press PRE A to change Preset A
- Press VIEW to view count (over-run)
- Press RESET/STOP to reset to "0" (Preset A)

If RESET/STOP is activated while the unit is started, Relay A (and Relay B if Prewarn) will drop out and the last count will remain on the display. Press START to continue the batch or RESET/STOP to abort the batch. All starts are inhibited if RESET/STOP is held active.

Grand Total or Batch Counter

The second counter (displayed with inverted decimals) can be programmed as a Grand Total or Batch counter. The Grand counter counts the grand total, the Batch counter counts the total number of complete batches. These counters can only be reset from the front panel while viewing them. To reset, press the VIEW key until the displays shows a number with all decimals lit. Press RESET/STOP to reset.

Relay B Operation

Relay B can be programmed as a prewarn relay or grand total/batch counter alarm.

When Relay B is set for Prewarn, Relay B will energized when the batcher is started. Relay B will drop out when the count is at the selected number (Preset B) before final Preset A. This is often used for slow down (2 stage batching).

When Relay B is set for total (Batch or Grand Total), Relay B will energize for the selected time duration when the Batch/Grand Total reaches Preset B. If the Relay is set to latch, it can be reset by resetting the Batch/Grand Total. (as described above).

Relay B as Scaled Pulse Output

To use output B as a scaled output proceed as follows:

- 1) Select **ዓገገ** under **ፎርምት** section of menu.
- 2) Select **ፎገ** under **ፕሮግራም** section of menu.
- 3) Enter the desired duration for the B Relay.
- 4) Set **ዋገገ** at desired scaling (**ዋገገ** is a divider).
Maximum output frequency is 15 pulses/second.

Presets

Preset A can be viewed and changed by pressing the "PRE A" button. The present Preset A will appear. Press buttons "A" through "E" to load in desired Preset A. Press the ENTER button once to enter.

Preset B can be viewed and changed by entering the program menu. Press the PRGM button. PRE B will appear. Press ENTER. The present Preset B will appear. Press buttons "A" through "E" to load in desired Preset B. Press the ENTER button once to enter.

VIEW Button


The VIEW button allows you to alternately view:

1. Count of "A" (Batch)
2. Rate of "A" (Batching speed)
- 3.* A) Grand Total if **ዓገገ** is selected
B) Number of Batches if **ፊገገ** is selected

* All decimal points are inverted when Grand/Batch Total is being displayed.

MILLIVOLT INPUT OPTION JUMPER SELECTIONS

Millivolt Input Option Jumper Selections

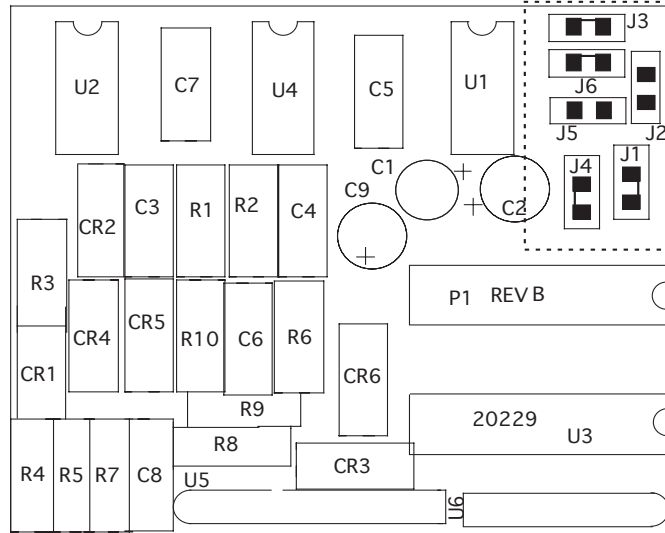


If the unit has the millivolt input bd.# 20229, the count input can be separately solder jumper programmed to accept either a low millivolt or 4-30 V input. Each unit shipped is programmed according to part number. If solder jumpers are made, the part number should be modified to reflect the changes made

C=CLOSE, O=OPEN

| 4-30V INPUT | Millivolt INPUT |
|------------------|------------------|
| J1-O, J2-C, J3-O | J1-C, J2-O, J3-C |

FRONT PANEL OPERATIONS

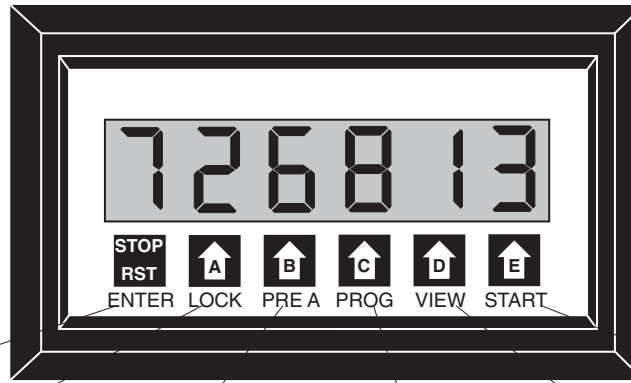

Press to STOP / RESET in operating mode; Press to "ENTER" in programming mode.

Press to "enter" LOCK code for panel lock.


Press to view or change Preset A

Press to cycle through PROGRAM choices; Press to step through set up choices in program mode.

Press to alternately view Rate, A Total or B Total

Press to Start

PROGRAMMING FLOWCHART

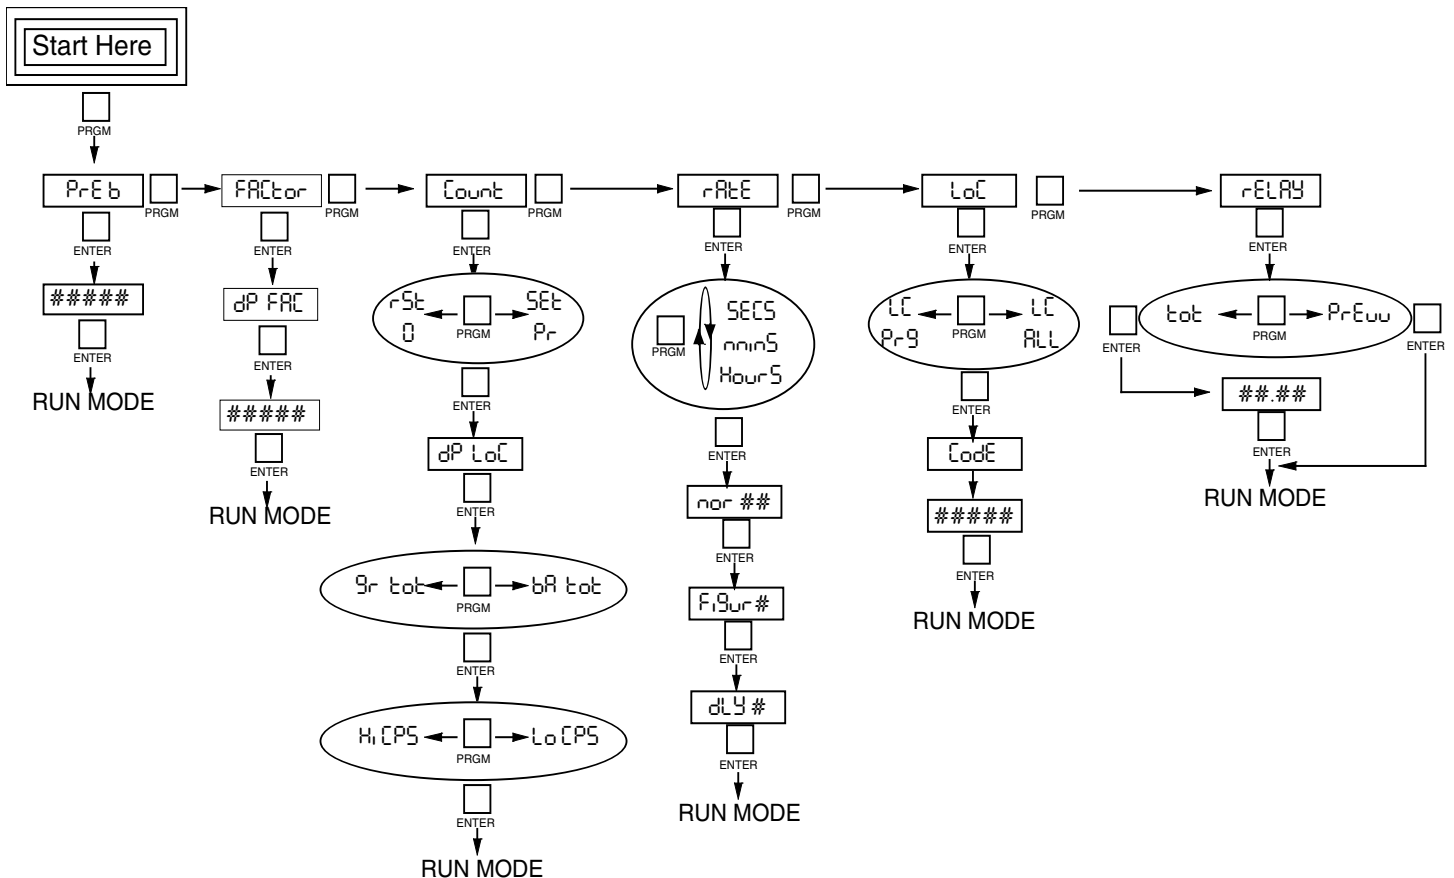

DEFINITIONS OF MENU PROMPTS

The following is a list of abbreviations as they appear on the display and front panel of the unit.

| <u>ABBREVIATION</u> | <u>DESCRIPTION</u> |
|---------------------|--|
| PRE B | PRESET B - This is the setpoint for Relay B. Preset B can be used as a Prewarn or Grand/Batch Total alarm. |
| SCALE | SCALING FACTOR - This portion of the menu is used to set the 5 digit dividing scale factor for the count input. |
| DPFA | DECIMAL POINT FOR FACTOR A - Enter location of decimal point for scaling Factor A by pressing the button under the digit where the decimal is desired. |
| COUNT | PORTION OF MENU FOR SETTING COUNTER VARIABLES |
| RESET | RESET TO 0 - Counter will reset to 0. The Batcher will count up from 0. |
| SET PR | SET TO PRESET - Counter will reset to preset A. The Batcher will count down from preset A. |
| DPLOC | DECIMAL POINT LOCATION - Enter desired location of decimal by pushing the button under the digit where the decimal is desired. Changing the decimal will change the decimal location in the counter's presets and rate display. |
| GR TOT | GRAND TOTAL- This sets the second counter to count the Grand Total. |
| BATCH TOT | BATCH TOTAL- This sets the second counter to count the number of Batches. |
| HICPS | HIGH COUNTS PER SECOND - This sets the unit for high count speeds (0-9.99 kHz) |
| LOCPS | LOW COUNTS PER SECOND – This sets the unit for contact debounce filtering (0-40 Hz) |
| RATE | PORTION OF MENU FOR SETTING RATE VARIABLES |
| SEC | SECONDS - The rate display will read in rate per second. |
| MIN | MINUTES- The rate display will read in rate per minute. |
| HOUR | HOURS - The rate display will read in rate per hour. |
| NOR ## | NORMALIZING FACTOR - Normalizes (averages) the data being received. Higher settings provide more normalizing (averaging) for a more stable display. Derived from the equation: $\frac{(\text{Old Data} \times \text{"NOR"} + \text{New Data})}{(\text{"NOR"} + 1)}$ |
| FIGURE ## | SIGNIFICANT FIGURE - This sets the amount (1-5) of meaningful figures the unit will display. (RATE DISPLAY ONLY). FOR EXAMPLE: If "2" is set as the figure, a rate of 273.45 will be displayed as 270. |

DEFINITIONS OF MENU PROMPTS

(continued)

| <u>ABBREVIATION</u> | <u>DESCRIPTION</u> |
|---------------------|---|
| dLY## | DELAY FACTOR - The amount of time (02 to 24 sec.) the unit will "look" for valid data, before the display defaults to zero. (RATE DISPLAY ONLY) |
| LoC | LOCK - This portion of the menu allows you to set lock functions (Lock functions apply only to front panel) 1) lock the program (Preset A is still accessible) 2) lock all (locks program & presets; Start & Stop/Reset are accessible). |
| LC Prg | LOCK PROGRAM - This will lock the program. Preset A can be changed, start, stop & reset will function when the unit is in the lock mode (lock ON). |
| LC ALL | LOCK ALL - This will lock the program and the presets when the unit is in the locked mode. Preset A can be viewed, but not changed. Start and Stop/Reset buttons will still operate. |
| LoDE | LOCK CODE - This message (code) will flash on display for approximately 3 seconds. It will be followed by a 5 digit number (xxxxx). The number you enter here will be the code to lock and unlock the unit. |
| RELAY | RELAY - This portion of the menu allows you to set your relay operation variables. |
| PRELU | PREWARN - When this is selected Relay B energizes when started and drops out at "Preset B" amount before batch is complete. |
| LoT | RELAY B FOR TOTALIZER - When this is selected relay B will activate when the selected Grand or Batch total has reached Preset B. |
| b##.## | RELAY B DURATION - This message will appear when "TOT" is selected. It is the duration which the relay will remain energized (00.01 to 99.99 sec). If 00.00 is selected, the relay will latch until reset. When the duration is not at 00.00, the Grand/Batch totalizer will autorecycle. |

CALCULATING SCALE FACTORS

The unit has a programmable scale factor to scale the input pulses. It is a 5 digit , floating decimal divider factor. The factor to enter is the number of pulses per the desired unit of measurement. The factor ranges from 0.0001 to 99999.

Scale factor calculations are simple. Here are some examples:

DECIMAL LOCATION:

When a decimal is desired for display, special care must be taken when programming the Factor (FACTOR) and Decimal Location (DPLOC). The factor must be entered in pulses per units desired for display. (i.e. pulse per 1 unit, pulses per 0.1 units, pulses per 0.01 units, etc.) The Decimal Location (DPLOC) controls the decimal placement for the display. For each decimal place you move for DPLOC, you must also move the decimal for the factor (DPFA).

Example: The flow sensor outputs 678.4 pulses per gallon.
 To display whole gallons (1 gal) enter 678.4 for the factor
 To display tenths of gallons (0.1 gal) enter 67.84 for the factor
 To display hundredths of gallons (0.01) gal) enter 6.784 for the factor

SCALING FACTOR EXAMPLES:

Flow Batching: You want to fill a 55.0 gallon drum. The flow sensor gives 387 pulses per gallon.

Solution - Dial in a scale factor of 38.7 (38.7 to display 0.1 gal; 387 for whole gal.)
 Under COUNT, set DPLOC to DPLOC to read tenths of gallons.
 Set PRE A at 55.0; Wire Relay A to solenoid valve.

Converting Scale Factors

When different units of measure are given than what is desired, simply convert the given Scale Factors to reflect the desired units using the following calculations.

$$\frac{\text{Pulses Per Unit (given)}}{\text{Units Conversion Factor}} = \text{Scale Factor}$$

Use the Units Conversion Chart below when converting the given Scale Factor. Be sure to use the Scale Factor for whole units and divide it by the proper Conversion Factor.

| UNITS CONVERSION CHART | | | |
|-----------------------------------|------------------|-----------------------------------|------------------|
| To convert: | divide factor by | To convert: | divide factor by |
| ft to m | 0.3048 | kg to lb | 2.2046 |
| ft ² to m ² | 0.0929 | l to ft ³ | 0.0353 |
| ft ³ to m ³ | 0.02832 | l to gal | 0.2642 |
| ft ³ to gal | 7.4805 | m to ft | 3.2808 |
| gal to l | 3.7854 | m ² to ft ² | 10.7639 |
| gal to m ³ | 0.00379 | m ³ to ft ³ | 35.3147 |
| gal to ft ³ | 0.1337 | m ³ to gal | 264.172 |
| gal to lb (H ₂ O) | 8.3378 | lb to kg | 0.45359 |

PROGRAMMING

| <div style="border: 1px solid black; border-radius: 10px; padding: 10px; text-align: center;"> STEP 1 </div> SETTING PRESET B | <u>PRESS</u> | <u>DISPLAY</u> | <u>REMARKS</u> |
|---|--|----------------|--|
| | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> PRGM | PrE b | This section of the menu is used to set Preset B value. |
| | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> ENTER | ##### | This is Preset B. To change, press the arrow key under the digit(s) to change. Press ENTER to enter the displayed value. |

| <div style="border: 1px solid black; border-radius: 10px; padding: 10px; text-align: center;"> STEP 2 </div> SETTING SCALING FACTOR | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> PRGM | PrE b | |
|---|--|--------|--|
| | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> PRGM | FACtor | This section of the menu is used to set up the scaling factor for the count input. |
| | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> ENTER | dP FAC | This sets the decimal for factor A. Press the arrow key under the digit where the decimal is desired. To clear the decimal, press the arrow key furthest to the right (PRGM) . |
| | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto;"></div> ENTER | ##### | This is the scaling factor for the count input. To change, press the arrow key under the digit(s) to change. Press ENTER to enter the displayed value. |


PROGRAMMING (continued)







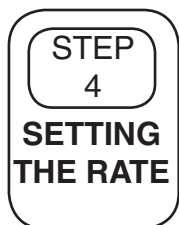

**STEP
3**
**SETTING
THE
COUNTER**

| | | | |
|--------------------------|-------|------------------------|--|
| <input type="checkbox"/> | PRGM | PrEb | |
| <input type="checkbox"/> | PRGM | FACtor | |
| <input type="checkbox"/> | PRGM | Count | This section of the menu sets up the counter information. |
| <input type="checkbox"/> | ENTER | RSt 0 or SEt Pr | Press the PRGM key to choose RST 0 (reset to 0, count up) or SET PR (set to preset, count down), press the ENTER key to enter the displayed choice. |
| <input type="checkbox"/> | ENTER | dPlac | This sets the decimal location for the A & B counters. Press the arrow key under the desired digit location. To clear the decimal, press the arrow key furthest to the right. Press the ENTER key to enter the displayed location. |
| <input type="checkbox"/> | ENTER | Gr tot or bAtot | This section sets the second counter operation. Press the program key to choose GR TOT (Grand Total) or BA TOT (Batch Total). Press the ENTER key to enter the displayed choice. |
| <input type="checkbox"/> | ENTER | Hi CPS or Lo CPS | Press the PRGM key to choose HIGH CPS (0-9.99KHz) or LOW CPS (0-40Hz). Press the ENTER key to enter the displayed choice. |

PROGRAMMING

(continued)



| <u>PRESS</u> | <u>DISPLAY</u> | <u>REMARKS</u> |
|--|-----------------------------|---|
|  PRGM | PrEb | |
|  PRGM | FACtor | |
|  PRGM | Count | |
|  PRGM | rAtE | This section of the menu is used to set up the rate information. |
|  ENTER | SECS minS or HourS | Press the PRGM key to choose SECS (rate per second), minS (rate per minute) or HourS (rate per hour). Press ENTER to enter displayed choice. |
|  ENTER | nor ## | This sets the normalizing (averaging) factor. Press the arrow keys under the desired digits to change. Press ENTER to enter displayed value. |
|  ENTER | Figur # | This sets the number of significant figures to be displayed. Press the arrow key under the digit to change. Press ENTER to enter displayed value. |
|  ENTER | dLY ## | This sets the delay time (2 to 24 sec.) that the unit will "look" for valid input data before the display falls to 0. Press the arrow key under the digits to change. Press ENTER to enter displayed value. |

PROGRAMMING

(continued)

STEP 5 SETTING LOCK

PRESS

DISPLAY

REMARKS



PRGM

PrE b



PRGM

FACTOR



PRGM

Count



PRGM

rAtE



PRGM

LoC

This section of the menu is used to set up the lockout type and code number.



ENTER

LC PG
or
LC ALL

LC PG = Locks program but presets and reset are accessible. (see description)
LC ALL= Locks all keypad buttons except START, STOP/RESET & VIEW.
Press the PRGM button to toggle between choices; Press ENTER to enter displayed choice.



ENTER

CoDE
Flashes
followed by:
#####

After CODE flashes the display will show the existing lock code. To change the code press the key under each digit to be changed. Press ENTER to enter displayed value.
(see below to turn lock ON or OFF)

SETTING THE LOCK STATUS



LOCK

CoDE
Flashes
followed by:
0

Key in the lock code (see programming step 4) by pressing the keys under the digits to be changed. Press the ENTER key to enter the displayed code.



ENTER

LoC
or
un LoC

After the code is entered the unit will display LOC (unit is locked) or UN LOC (unit is unlocked). This message will be displayed for approximately 3 seconds before the unit returns to the run mode.

PROGRAMMING (continued)

| | <u>PRESS</u> | <u>DISPLAY</u> | <u>REMARKS</u> |
|---|--------------------------|-------------------|--|
| <div style="border: 1px solid black; border-radius: 10px; padding: 10px; text-align: center;"> STEP 6 SETTING THE RELAYS </div> | <input type="checkbox"/> | PrEb | |
| | PRGM | | |
| | <input type="checkbox"/> | FACTOR | |
| | PRGM | | |
| | <input type="checkbox"/> | Count | |
| | PRGM | | |
| | <input type="checkbox"/> | rAtE | |
| | PRGM | | |
| | <input type="checkbox"/> | LoC | |
| | PRGM | | |
| | <input type="checkbox"/> | rELAY | This section sets up the relay information. |
| | PRGM | | |
| | <input type="checkbox"/> | tot or PrEw | Press the PRGM key to choose tot (Relay B assigned to total) or PREW (Relay B assigned to prewarn). Press enter when the desired choice is displayed. |
| | ENTER | | |
| | <input type="checkbox"/> | b###.## | This will only appear if tot selected. This is the duration (.01 to 99.99 sec) that relay B will remain energized. If 00.00 is selected, the relay will latch until reset. |
| | ENTER | | |

| | | | |
|--|--------------------------|--|---|
| <div style="border: 1px solid black; border-radius: 10px; padding: 10px; text-align: center;"> SETTING THE PRESETS </div> | <input type="checkbox"/> | PrEA Followed by last PRE A entered | PRE A = Preset A (Batch Amount); The set point at which output A will drop out after started. If the displayed value is not the desired preset, press the key under the digit(s) to be changed. |
| | PRE A | | |
| | <input type="checkbox"/> | PrEb | PRE B = Preset B ; a) tot selected The set point at which output B will energize. |
| | PRGM | | b) PrEw selected The number of counts before batch ends that output B will drop out. |
| | | | If the displayed value is not the desired preset, press the key under the digit(s) to be changed. |

TROUBLESHOOTING GUIDE

| <u>PROBLEM</u> | <u>POSSIBLE CAUSES</u> | <u>SOLUTIONS</u> |
|--|---|--|
| Power is applied to unit but the display does not light. | 1. AC or DC power wiring is incorrect. | 1. Recheck power wiring |
| Unit works, but occasionally the display freezes or skips counts. | 1. Line noise is affecting the processor due to a current spike or surge. | 1. Use a different power supply or install a surge suppressor. |
| Input signal is connected but the unit does not count or display rate. | 1. Input wiring is incorrect. 2. Scale factors are incorrect. 3. Transmitting device is defective. 4. Wrong debounce filtering selected. 5. Batcher is defective. | 1. Recheck input wiring. 2. Recheck scale factors and factor calculations. 3. Replace transmitting device. 4. Recheck debounce filtering selection "hi cps" or "lo cps". 5. To confirm set scale factor at one, connect a wire to pin #7 and touch it to pin # 5 (input A). Each time pin #5 is touched counter A should count once. If not, call factory for RMA. |
| Rate is displaying: r FFFFF. | 1. The unit is trying to display a number which it can't (too small or too large). 2. Line noise affected unit on power up. | 1. Check scaling factor, if it is correct, lower the number of significant figures. 2. Reprogram the unit and be sure to enter a decimal (enter one and remove it if a decimal is not desired). |
| Relays are not activating properly. | 1. START not activated. 2. Wrong relay duration. 3. Relay set for wrong activation i.e. EOE instead of PRELU. | 1. Relay A (and B if Prewarn) will only energize when start is activated. 2. Recheck programmed relay duration. 3. Recheck programmed relay activation mode. |
| Grand / Batch Counter resets before reaching 999999. | 1. Relay duration is set at a value other than 00.00. This causes the counter to auto-reset at the preset. | 1. If Relay B output is not being used, set the relay duration to 00.00. |
| Various menu items are not being displayed. | 1. The menu flow chart and the setup steps show the setup for units with all of the available options. Options not ordered will be suppressed in the programming menu. | 1. Disregard any menu items which appear on the flowchart and setup steps, but do not appear on the unit's display. |

WARRANTY

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of shipment to Buyer.

The Warranty is limited to repair or replacement of the defective unit at the option of the manufacturer. This warranty is void if the product has been altered, misused, dismantled, or otherwise abused.

ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, ARE EXCLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Ordering Information

GBM 110 = 110 VAC Powered

GBM 220 = 220 VAC Powered

OPTIONS: (add to end of Part number)

-M = Magnetic Pickup Input



5252 East 36th Street North
Wichita, KS USA 67220-3205
TEL: 316-686-7361
FAX: 316-686-6746

GREAT PLAINS INDUSTRIES, INC.
"A Great Plains Ventures Subsidiary"